

d@tacom

TM

DIGITAL TERRESTRIAL RECEIVER

TDT-100



User s Manual

Safety

1. Allow clear space around the DVBT for sufficient ventilation.
2. Do not cover the DVBT or place it on a unit that emits heat.
3. Use a soft cloth and a mild solution of washing liquid to clean the casing.
4. Do not connect to modify cables when the DVBT is plugged in.
5. Do not remove the cover.
6. Do not allow the unit to be exposed to extreme heat, cold or humid conditions.
7. Never allow liquids, spray or other materials to come into contact with the inside of the model.

Main Features

1. Fully MPEG2, DVB compliant
2. PIG (Picture In Graphic) support
3. User Friendly and easy-to-use menu system
4. Various channel editing functions (favorite, moving, locking, deleting and sorting)
5. Stores up to 1000 channels
6. Easy and fast software upgrade through RS-232 port
7. Electronic Program Guide (EPG)
8. Multi video output-CVBS, RGB
9. Automatic last channel scanning
10. OSD Teletext (DVB ETS 300 706) and subtitle function support

Package Contents

 
Before installation, please check the items of the package.

The package should contain the following items:

- ~ DVB-T TV Receiver x1
- ~ Remote Controller x1
- ~ AAA Battery for the remote controller x2
- ~ User's Manual x1
- ~ Scart Cable x1

1. Front Panel




1.  : Turns on and off the power of the receiver.
2. **CH**: When watching, changing to the previous and next channel, or moves to the next higher or lower item in the menu.
3. **4 digit LED display**: Shows program information at start up displays software and menu.

2: Rear Panel



1. **ANT IN**: Connects the DVBT antenna cable.
2. **ANT OUT**: Use it to connect to other DVBT.
3. **RS-232**: Upgrades the STB Program & Software.
4. **VCR**: Connects your VCR via a SCART cable to this receiver.
5. **TV**: Connects your TV via a SCART cable to this receiver.
6. **S/P DIF**: Output for connection to a digital amplifier.
7. **~100-240V (Auto-selectable), 50/60Hz**. Make sure to check the power specification.
8. **POWER SWITCH**

3. RCU

1. : Switches the DVBT between operation and standby mode.
2. INFO: Displays the programme information box on the screen.
3. 0-9(Numeric Keys): Selects the TV or Radio service channels and individual menu options.
4. AUDIO: Set the output direction for speaker.
5. TV/RADIO: Select the TV/Radio mode.
6. EPG: Displays the EPG(Electronic Programme Guide) on screen only when available.
7. MUTE: Enables/disables the audio.
8. EXIT: Returns to the previous menu and the screen.
9. MENU: Displays the Menu on screen or returns to previous menu from submenu.
10. OK: Confirms the choices and selection with highlight menu item.
11. CH+/-: Changes channels in viewing mode and moves cursor up or down in menu mode.
12. VOL+/-: Changes the volume level in viewing mode and setting in menu mode.
13. PAUSE: To still picture in current channel.
14. TV/VCR: Changes the terrestrial TV and VCR mode.
15. RECALL: Moves to the previous channel.
16. FAV+/-: To move up or down favorite channels in the favorite list.
17. SUBTITLE(P/N): Show the Subtitle in program.
18. TEXT: Shows the teletext content that is transmitted.
19. FAV: To show favorite channels list.
20. MULTIVIDEO: to show 9 Channels in screen.



4. Main Menu

This menu consists of 7 main menus as below:

1. Program List
2. Program Search
3. Parental Control
4. System Setting
5. Game
6. Accessory
7. Personal Style



4.1 Program List

Select Program List, press OK to enter the sub-menu:

1. TV Program List
2. Music Program List
3. Sort
4. Del All TV Program
5. Del All Music Program



4.1.1 TV Program List

Enter this menu, you can set your favorite channels, Move or Del channels.



4.1.2 Music Program List

The same as 4.1.1

4.1.3 Sort

Sorting your programs by name, by service ID or by channel



4.1.4 Del All TV Program

Delete all TV program

4.1.5 Del All Music Program

Delete all music program

4.2 Program Search.

Select Program Search, press OK to enter the sub-menu:

1. Automatic Search
2. Manual Search



4.2.1 Automatic Search.

Search programs automatically


4.2.2 Manual Search

Select Channel No. (CH05 to CH69), set frequency, bandwidth to search programs manually



4.3 Parental Control

Set Channel Lock, Parental Setting, Change PiN

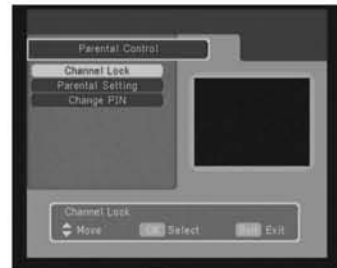

4.3.1 Channel Lock

Select Channel Lock on or off



4.3.2 Parental Setting

Lock the channels you choose



4.3.3 Channel PIN

Change system password

Original password is 8888

Warning: If you changed the password, please keep your new password in a safe place. If you loss it, please contact your local distributor for help.



4.4 System Setting

Enter this menu, you can:

- A. TV Standard*Select TV standard: PAL/NTSC/AUTO
- B. Display Type:Select 4:3 PS, 4:3LB, 16:9 mood
- C. Video Output:Select CVBS or RGB video output
- D. Antenna Power: Select Antenna Power ON or OFF.



E. Regional Setting:

Press OK to enter sub-menu:

Set Country, OSD Language, Time Zone



F. Language.

Press OK to enter sub-menu:

Set OSD Language, 1st Audio Language, 2nd Audio Language, DVB Subtitle.



G. Time Setting: Press OK to enter sub-menu:

Set GMT usage, Time Zone



H. System Schedule

Press OK to enter sub-menu:

Set Schedule and Detail



4.5 Game

Use remote controller to play Games

4.6 Accessory

1. System Information: Display system information
2. Factory Default:

Restore Factory Default. If you restored it, all the setting you made would be cleared.

3. System update.

Update your system

4.7 Personal Style:

In this sub-menu, you can set Menu Color, Transparency Level, Border Pattern, Entry Animation.



5. EPG:

You receiver can display EPG provided that the broadcaster is transmitting this. It will display what's on now and what's on next. Press EPG button and below menu will appear. After you press right arrow key an event the full EPG for the channel is displayed on screen.

